


NCP3901 EVB setup

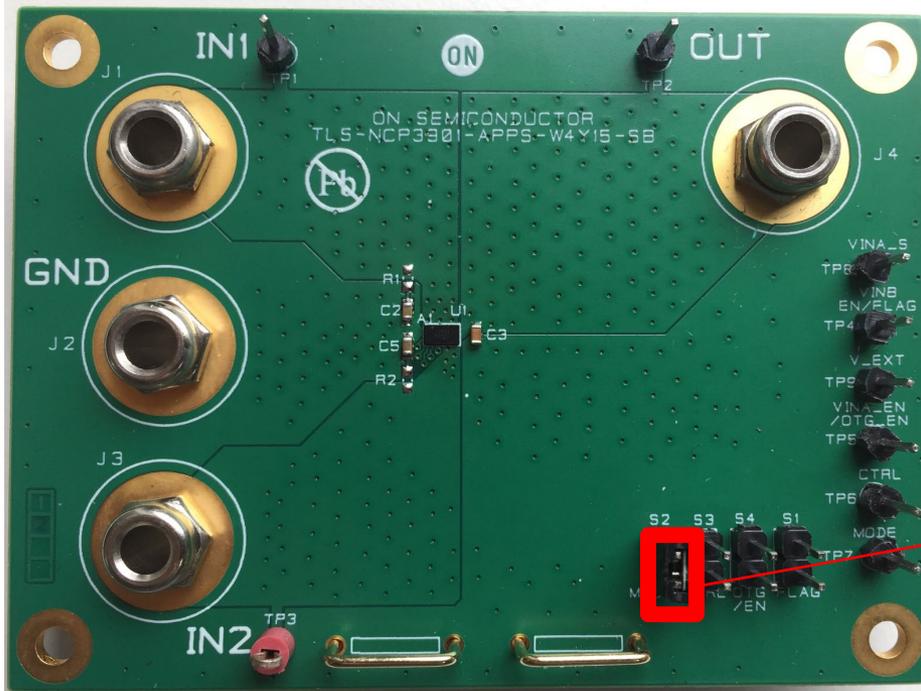

Default configuration:
Jumper on S2

EVB Test step:

1. Add external 5V between IN1 and GND, check OUT should be 5V, Then remove external 5V
2. Add external 5V between IN2 and GND, check OUT should be 5V, Then remove external 5V