

# Test Procedure for the NCV7685BCMR1GEVK Evaluation Kit

### Initial setup:

- 1. NCV7685BCMR1GEVB module needs to be inter-connected with LOW, MID or HIGH end variant of the EVB board.
- 2. Return function switches to the default OFF position on the BCM board
- 3. Connect Cables for CON-FCN, CON-KEY and CON\_DIAG

## **Required Equipment:**

- Bench power supply with A-meter with minimum current limit of 2A
- Multimeter
- NCV7685BCMR1GEVB board
- NCV7685LOWR1GEVB board or NCV7685MIDR1GEVB board or NCV7685HIGHR1GEVB board

### Test procedure (BCM indication LEDs)

- 4. Connect setup as shown above
- 5. Apply 14V using the Battery input DC connector.
- 6. By default, no current consumption is expected.
- 7. By activation the any switch, the appropriate indication LED on the NCV7685BCMR1GEVB module should be turned ON.

## Test procedure (verify complete functionality)

 To verify complete functionality, follow the NCV7685LOWR1GEVB\_TEST\_PROCEDURE, NCV7685MIDR1GEVB\_TEST\_PROCEDURE or NCV7685HIGH1GEVB\_TEST\_PROCEDURE depends on the type of the EVB connected.