

LC717A Series Capacitance Checker 2 Software User's Manual



ON Semiconductor®

www.onsemi.com

APPLICATION NOTE

OVERVIEW

This document describes the operation method of LC717A series capacitance checker application software “LC717ACapChecker2.exe”.

FUNCTIONS

- Measurement of C_{in} electrode capacitance
- Measurement of C_{ref} reference capacitance


SETUP

Installing Software

Copy the executable capacitance check software “LC717ACapChecker2.exe” (Hereinafter this is called “the CapChecker software”) to any folder on your PC.

Connect the Evaluation Board to the PC

1. Required – USB conversion module.
(See below for tested modules and device drivers)
2. Connect USB conversion module to LC717A series evaluation board.
3. Connect USB conversion module to PC.

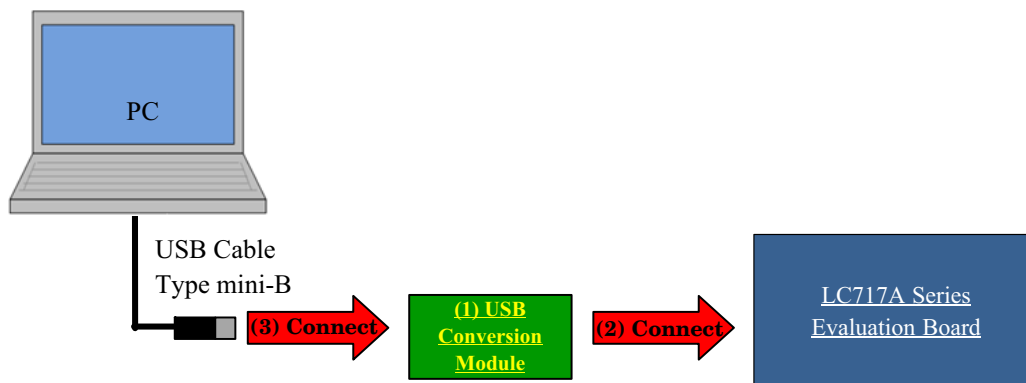

Tested USB conversion modules:

- “MM-FT232H” produced by Sunhayato Corp (Japan).

Device Driver for the USB conversion modules:


You can download [D2XX drivers](#), which are appropriate drivers for the modules, from FTDI’s web page. Please download the device driver from the following URL and install it into your PC.

FTDI official web page: <http://www.ftdichip.com/>


USING THE APPLICATION SOFTWARE

(1) Open LC717ACapChecker2.exe



When you start the CapChecker software with USB conversion module correctly connected with PC, the following windows are displayed.

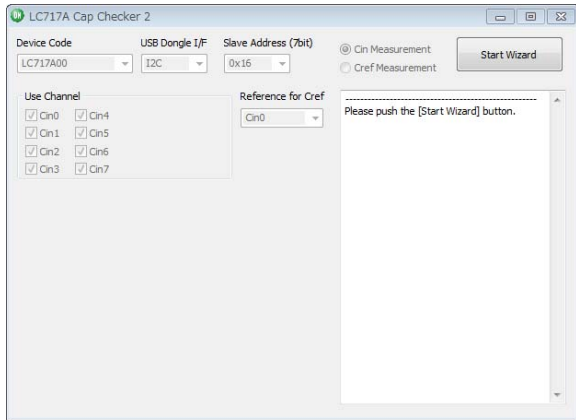


If USB conversion module is incorrectly connected to your PC, the following window is displayed.

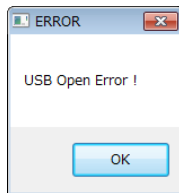


(2) Push the [Start Wizard] button

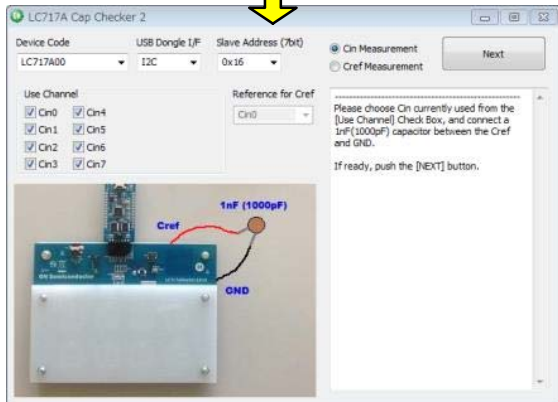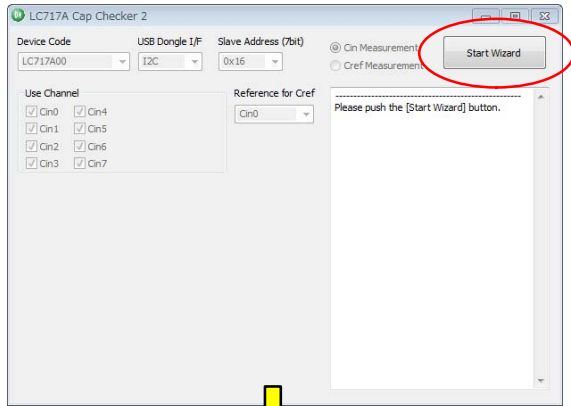


(3) Choose the evaluation board configuration

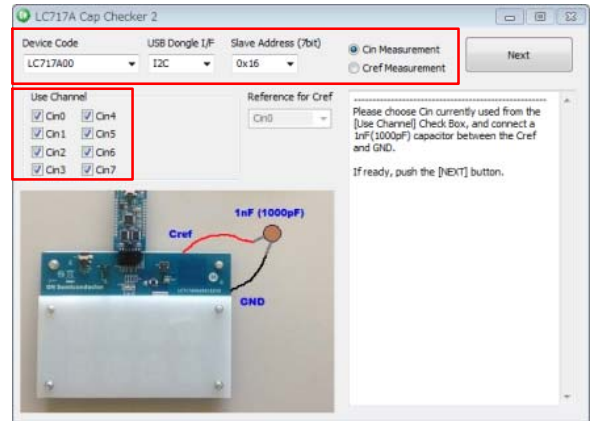


(4) Push the [Next] button

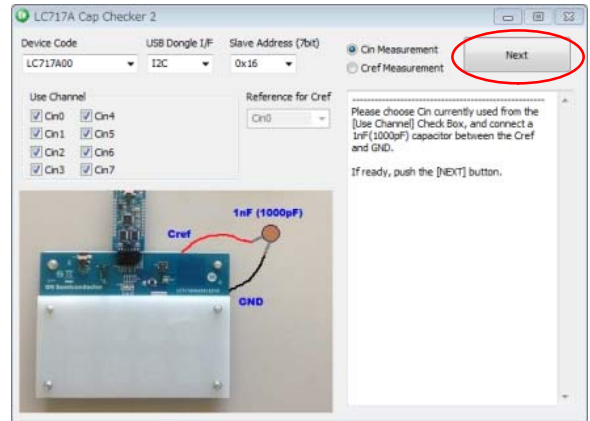

(5) Capacitance measurement starts

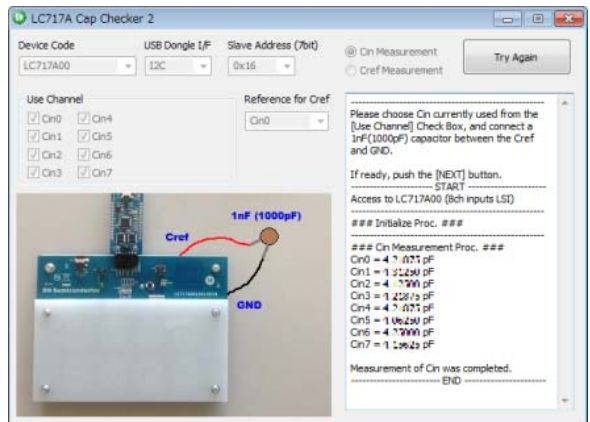

MAIN WINDOW (LC717A00)

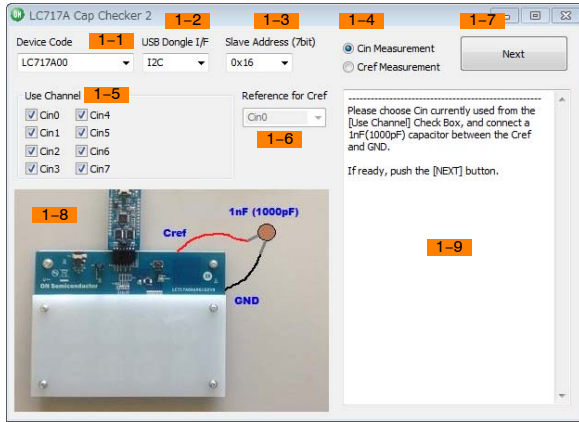

[1-1] [Device Code]

Choose LC717A00 from combo box.

[1-2] [USB Dongle I/F]


Choose one from combo box. (I2C or SPI)

[1-3] [Slave Address (7 bit)]


Choose one from combo box. (0x16 or 0x17)

[1-4] [Cin Measurement]/[Cref Measurement]

In the case of the [Cin Measurement], a dialog changes as follows. Choose [1-5] [Use Cannel] check button.

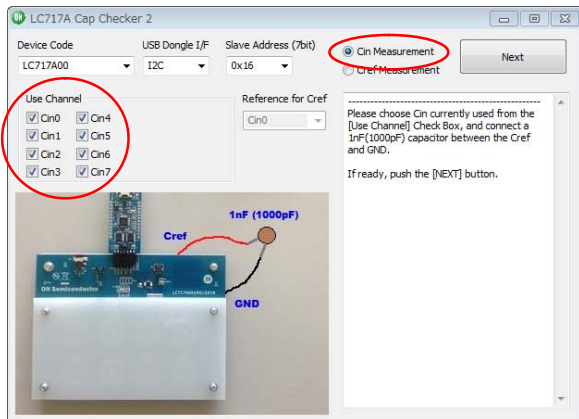

In the case of the [Cref Measurement], a dialog changes as follows. Choose [1-6] [Reference for Cref] combo box.

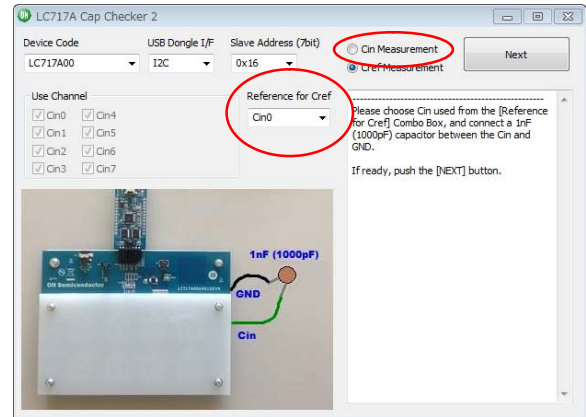

[1-5] [Use Cannel]

Choose Cin used from the [Use Channel] check box. And connect a 1nF (1000 pF) capacitor between the Cref and GND.

[1-6] [Reference for Cref]

Choose Cin used from the [Reference for Cref] combo box. And connect a 1nF (1000 pF) capacitor between the Cin and GND.

[1-7] [Next]

When push the [Next] button, capacitance measurement starts.


[1-8] [Picture]

Capacitance measurement configuration is shown.

[1-9] [Message Window]

This window shows instructions, processing state, measurement result and error contents.

MAIN WINDOW (LC717A10)

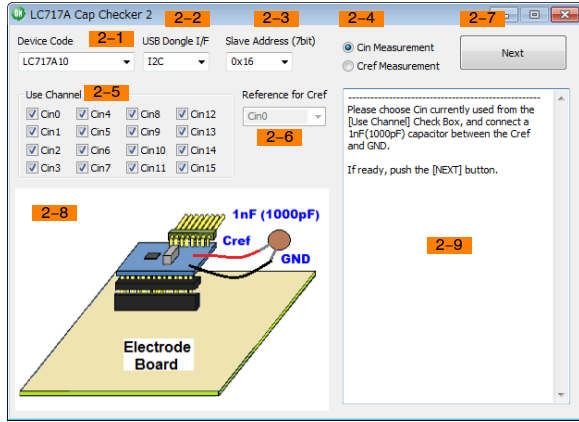

[2-1] [Device Code]

Choose LC717A10 from combo box.

[2-2] [USB Dongle I/F]

Choose one from combo box. (I2C or SPI)


[2-3] [Slave Address (7 bit)]

Choose one from combo box. (0x16 to 0x19)

[2-4] [Cin Measurement]/[Cref Measurement]

In the case of the [Cin Measurement], a dialog changes as follows. Choose [2-5] [Use Cannel] check button.

In the case of the [Cref Measurement], a dialog changes as follows. Choose [2-6] [Reference for Cref] combo box.

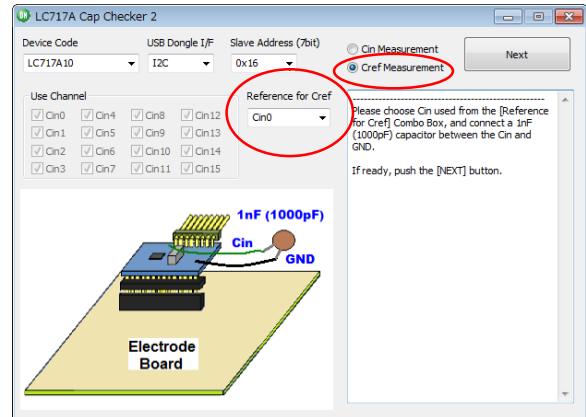

[2-5] [Use Cannel]

Choose Cin used from the [Use Channel] check box. And connect a 1nF (1000 pF) capacitor between the Cref and GND.

[2-6] [Reference for Cref]

Choose Cin used from the [Reference for Cref] combo box. And connect a 1nF (1000 pF) capacitor between the Cin and GND.

[2-7] [Next]


When push the [Next] button, capacitance measurement starts.

[2-8] Picture


Capacitance measurement configuration is shown.

[2-9] Message Window


This window shows instructions, processing state, measurement result and error contents.

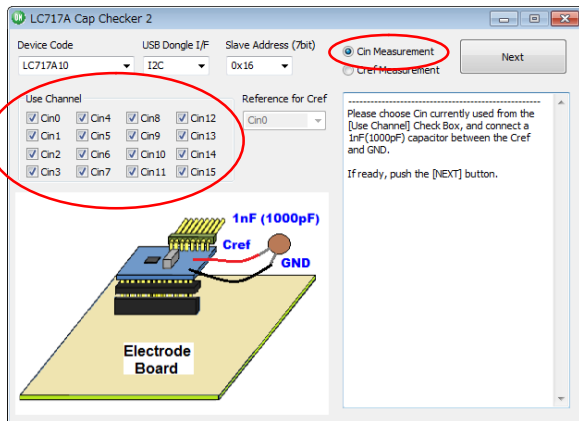


MAIN WINDOW (LC717A30)

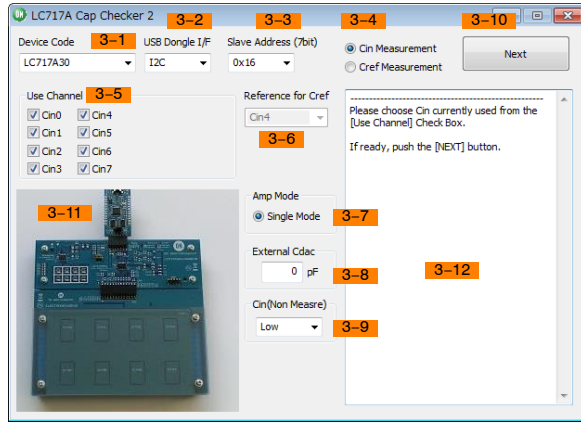

- [3-1] [Device Code]
Choose LC717A30 from combo box.
- [3-2] [USB Dongle I/F]
Choose one from combo box. (I2C or SPI)
- [3-3] [Slave Address (7 bit)]
Choose one from combo box. (0x16 or 0x17)
- [3-4] [Cin Measurement]/[Cref Measurement]
In the case of the [Cin Measurement], a dialog changes as follows. Choose [3-5] [Use Cannel] check button. In addition, input [3-8] [External Cdac] and choose [3-9] [Cin (Non Measure)] combo box as necessary.

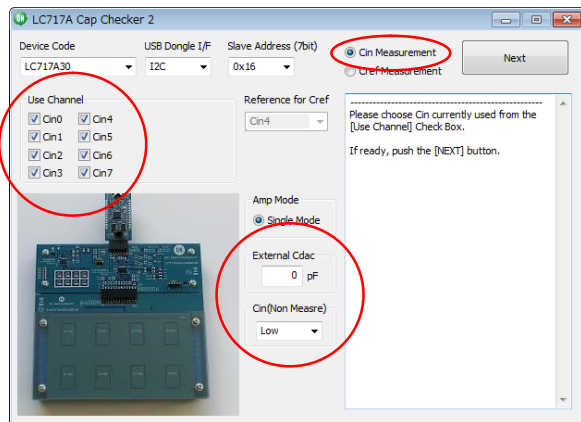

In the case of the [Cref Measurement], a dialog changes as follows. Choose [3-6] [Reference for Cref] combo box. In addition, input [3-8] [External Cdac] as necessary.

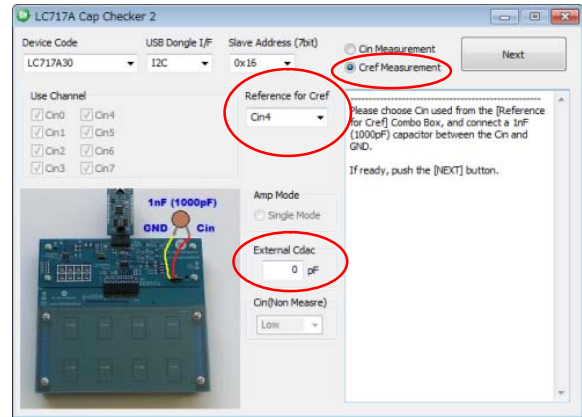

- [3-5] [Use Cannel]
Choose Cin used from the [Use Channel] check box.
- [3-6] [Reference for Cref]
Choose Cin used from the [Reference for Cref] combo box. And connect a 1nF (1000 pF) capacitor between the Cin and GND.
- [3-7] [Amp Mode]
CapChecker software automatically sets to single mode. In the case of the [Cin Measurement], Amp Mode works on Single Mode and it is measured without using the external parts. In the case of the [Cref Measurement], remove the Single Mode check on Amp Mode. Therefore, connect a 1 nF (1000 pF) capacitor between the Cin and GND.
- [3-8] [External Cdac] (Hereinafter this is called "ExtCap")
In the case of using external Cdac capacitances, it needs to prepare three same capacitances and needs to insert them between Cref and CdrvBar, between CMAdd0 and CdrvBar, and between CMAdd4 and CdrvBar. Input external Cdac capacitor value. Then, it is measured with external capacitances by using LSI internal Cdac. In the case of not using external capacitances, input external Cdac capacitor value as 0 pF.
- [3-9] [Cin (Non Measure)]
Choose one from combo box. (Low, Hi-z or Cdrv)
- [3-10] [Next]
When push the [Next] button, capacitance measurements starts.
- [3-11] Picture
Capacitance measurement configuration is shown.
- [3-12] Message Window
This window shows instructions, processing state, measurement result and error contents.

MESSAGE CONTENTS

Table 1. PROCESSING MESSAGE CONTENTS

Message	State	Advice
Please push the [Start Wizard] button.	Just after CapChecker software start.	When push [Start Wizard] button, CapChecker starts.
Please choose Cin currently used from the [Use Channel] Check Box, and connect a 1 nF (1000 pF) capacitor between the Cref and GND. If ready, push the [NEXT] button.	Cin measurement mode of LC717A00 or LC717A10 was chosen.	When push [Next] button, capacitance measurement starts.
Please choose Cin used from the [Reference for Cref] Combo Box, and connect a 1 nF (1000 pF) capacitor between the Cin and GND. If ready, push the [NEXT] button.	Cref measurement mode of LC717A00 or LC717A10 was chosen.	When push [Next] button, capacitance measurement starts.
Please choose Cin currently used from the [Use Channel] Check Box. If ready, push the [NEXT] button.	Cin measurement mode of LC717A30 was chosen.	When push [Next] button, capacitance measurement starts.
Please choose Cin used from the [Reference for Cref] Combo Box, and connect a 1 nF (1000 pF) capacitor between the Cin and GND. If ready, push the [NEXT] button.	Cref measurement mode of LC717A30 was chosen.	When push [Next] button, capacitance measurement starts.
Cin0 = 2.31250 pF	The capacitance measurement is finished normally.	Measurement mode using LSI internal Cdac. It is measurable from 0 to 8 pF.
Cin0 = 10.56250 pF	The capacitance measurement is finished normally.	Measurement mode using external Cdac. Input external Cdac capacitor value into [External Cdac]. (e.g. when 8 pF is inputted, it is measurable from 8 to 16 pF)
Cin0 = Unused	Cin channel is unused.	The unused channel does nothing.

Table 2. ERROR MESSAGE CONTENTS


Error Message	Error State	Advice
Error is detected. (Error Code: 1 (or 7)) System error occurred. Please check 1. Disconnection of Interface. 2. Imperfect solder joint. 3. Mistaken slave address(only I2C).	System error occurred. (SysErr bit = 1)	Disconnection of Interface. Imperfect solder joint. Mistaken slave address(Only I2C).
Error is detected. (Error Code: 2 (or 8)) Read Data is always low. Please check 1. Disconnection of Interface. 2. Imperfect solder joint. 3. Mistaken slave address(only I2C).	Read Data is always low. (Control 1 register data is not 09h)	Disconnection of Interface. Imperfect solder joint. Mistaken slave address(Only I2C).
Cin0 = AD value error (AD level) + Error is detected. (Error Code: 3 (or 9)) Calibration error occurred.	AD level abnormality after the calibration. (Other than -2 to +2)	Influence of the external noise.

AND9543/D

Table 2. ERROR MESSAGE CONTENTS(continued)

Error Message	Error State	Advice
Cin0 = Calibration Error (Too small) + Error is detected. (Error Code: 3 (or 9)) Calibration error occurred.	Calibration error occurred. (Cdac value is 00h or 01h)	Capacitance is too small. Disconnection of switch pattern. Note: Measurement mode using LSI internal Cdac.
Cin0 = Calibration Error (8pF to ExtCap) + Error is detected. (Error Code: 3 (or 9)) Calibration error occurred.	Calibration error occurred. (Cdac value is 00h or 01h)	Capacitance is from 8 pF to ExtCap. (In the case of about 8 pF, a measurement result may not be got. Change ExtCap and measure it again) Note: Only LC717A30.
Cin0 = Calibration Error (More than 8pF) or Cin0 = Calibration Error (More than 16pF) + Error is detected. (Error Code: 3 (or 9)) Calibration error occurred.	Calibration error occurred. (Cdac value is from FDh to FFh)	Capacitance exceeds the measurement range.
Cin0 = Data is abnormal (Cdac value) + Error is detected. (Error Code: 3 (or 9)) Calibration error occurred.	Not calibration error. (Cdac value is 00h or 01h)	Capacitance is too small, and a measurement result may be untrustworthy.
Cin0 = Data is abnormal (Cdac value) + Error is detected. (Error Code: 3 (or 9)) Calibration error occurred.	Not calibration error. (Cdac value is from FDh to FFh)	Capacitance exceeds the measurement range, and a measurement result may be untrustworthy.
Error is detected. (Error Code: 3 (or 9)) Calibration error occurred. Please check 1. Too large switch pattern. 2. Disconnection of switch pattern. 3. Influence of the external noise. 4. In the case of around 8pF, change ExtCap and measure it again. (only LC717A30)	Detailed error message when error code is 3 or 9.	Too large switch pattern. Disconnection of switch pattern. Influence of the external noise. In the case of around 8 pF, change ExtCap and measure it again. (Only LC717A30)

NOTE: When Cin measurement, error code is from 1 to 3. When Cref measurement, error code is from 7 to 9.

ON Semiconductor and  are trademarks of Semiconductor Components Industries, LLC dba ON Semiconductor or its subsidiaries in the United States and/or other countries. ON Semiconductor owns the rights to a number of patents, trademarks, copyrights, trade secrets, and other intellectual property. A listing of ON Semiconductor's product/patent coverage may be accessed at www.onsemi.com/site/pdf/Patent-Marking.pdf. ON Semiconductor reserves the right to make changes without further notice to any products herein. ON Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does ON Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation special, consequential or incidental damages. Buyer is responsible for its products and applications using ON Semiconductor products, including compliance with all laws, regulations and safety requirements or standards, regardless of any support or applications information provided by ON Semiconductor. "Typical" parameters which may be provided in ON Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. ON Semiconductor does not convey any license under its patent rights nor the rights of others. ON Semiconductor products are not designed, intended, or authorized for use as a critical component in life support systems or any FDA Class 3 medical devices or medical devices with a same or similar classification in a foreign jurisdiction or any devices intended for implantation in the human body. Should Buyer purchase or use ON Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold ON Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that ON Semiconductor was negligent regarding the design or manufacture of the part. ON Semiconductor is an Equal Opportunity/Affirmative Action Employer. This literature is subject to all applicable copyright laws and is not for resale in any manner.

PUBLICATION ORDERING INFORMATION

LITERATURE FULFILLMENT:

Literature Distribution Center for ON Semiconductor
19521 E. 32nd Pkwy, Aurora, Colorado 80011 USA
Phone: 303-675-2175 or 800-344-3860 Toll Free USA/Canada
Fax: 303-675-2176 or 800-344-3867 Toll Free USA/Canada
Email: orderlit@onsemi.com

N. American Technical Support: 800-282-9855 Toll Free
USA/Canada
Europe, Middle East and Africa Technical Support:
Phone: 421 33 790 2910

ON Semiconductor Website: www.onsemi.com
Order Literature: <http://www.onsemi.com/orderlit>

For additional information, please contact your local Sales Representative