SanyoFWS Version Up Procedure

1. Updating PC environment

   Update the PC environment with the latest install CD.

   There is no need to uninstall the old version. New environment will over write it.

2. Firmware update of the unit

   Open the “Firmware Update” application.

   [Start]→[All Programs]→[SanyoFWS Flash-micro Writing System]→[Firmware Update] will open the application.


   A window shown below will appear.

   Follow the instruction in the column located right side of the window.

   Pushing the START button, connect the USB cable.


※The device driver for the writer units is stored in the subdirectory named "UpdFirm" in the directory where the SanyoFWS is installed (the default installation directory is "C:¥Program Files¥SanyoLsi¥SanyoFWS¥UpdFirm"). When Windows asks you for the subdirectory name when attaching a writer unit to the SanyoFWS, specify this directory name and install the device driver.

1) A window when application is opened

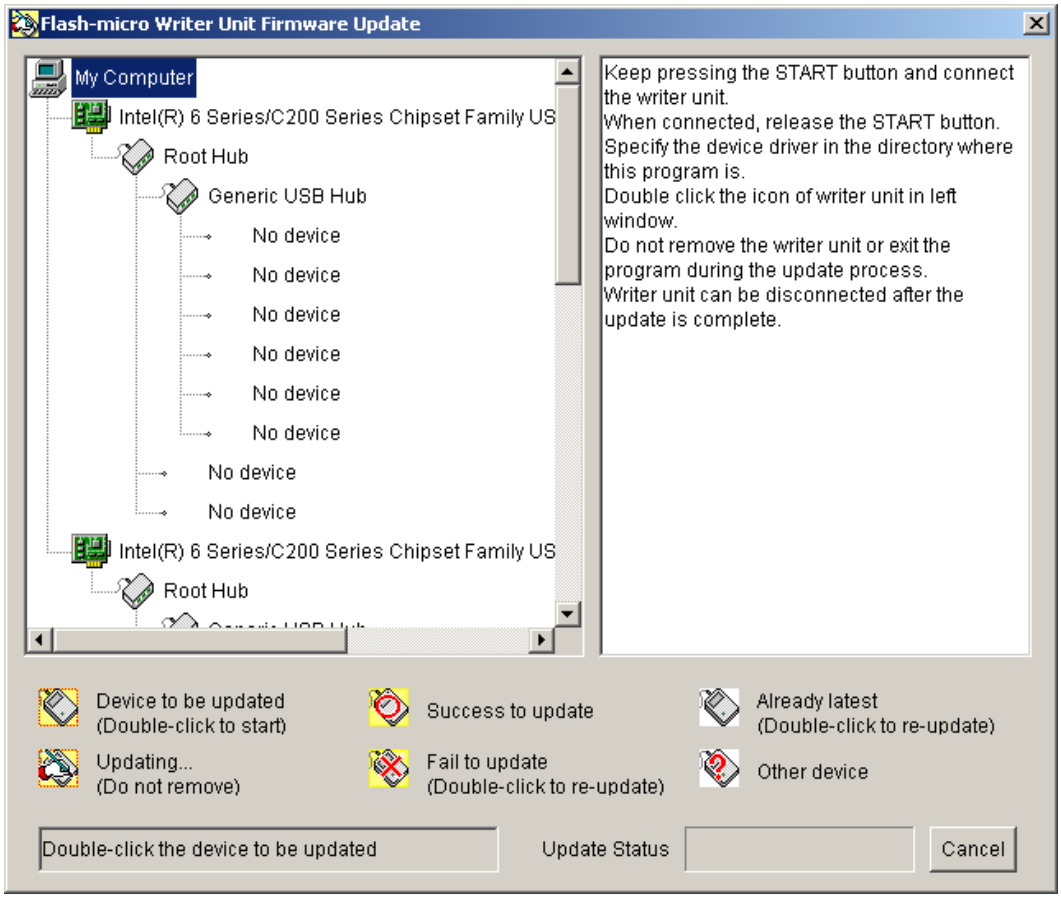


2) A window when unit is connected


When USB cable is connected, unit is recognized and the window will look like below.
Firmware update will start by double clicking the target device.

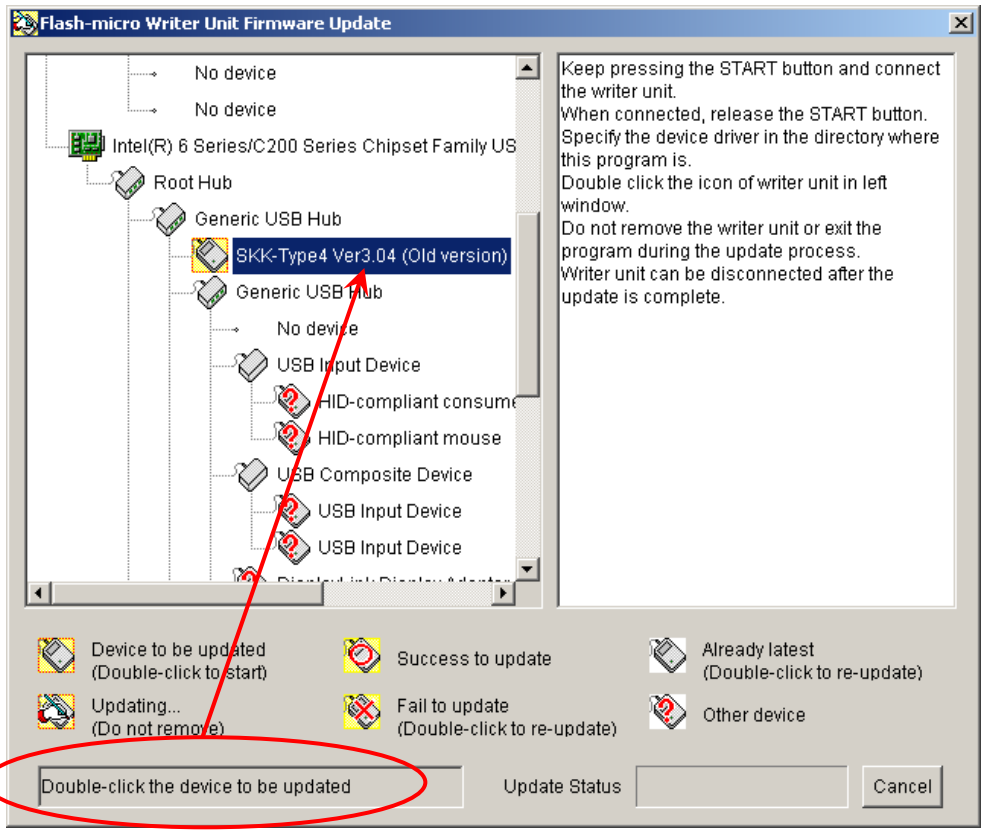


3) A window during update

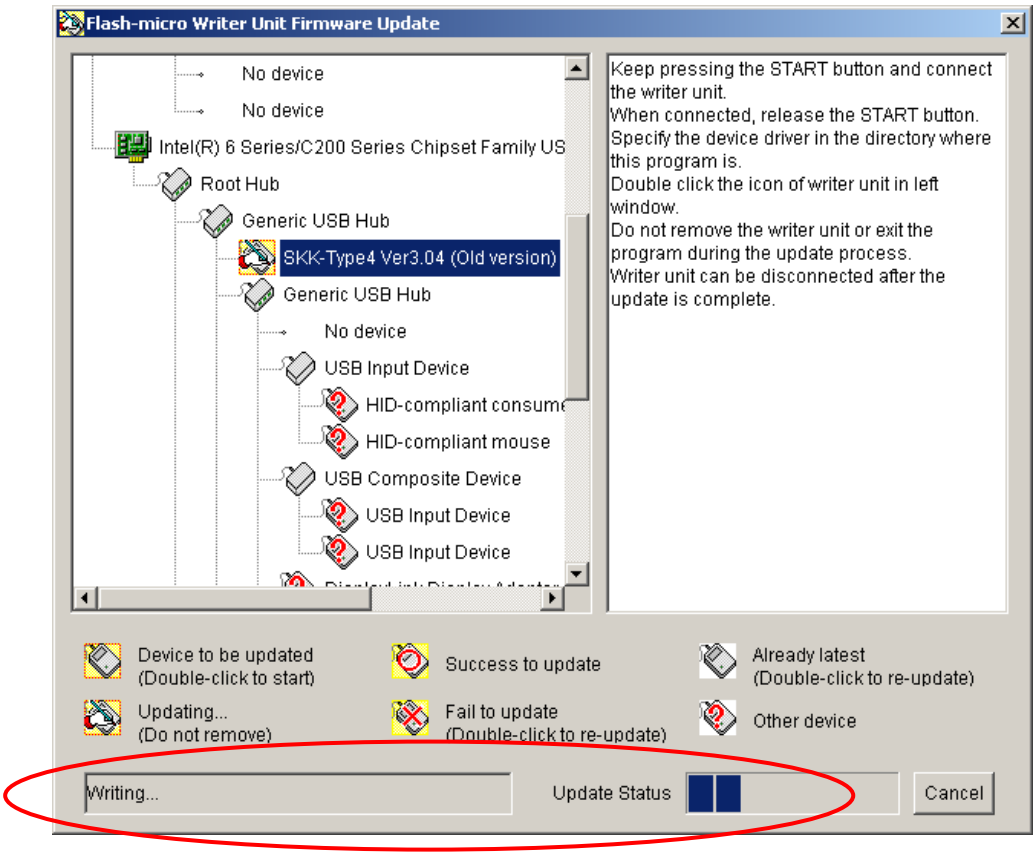

4) A window when update is successfully finished

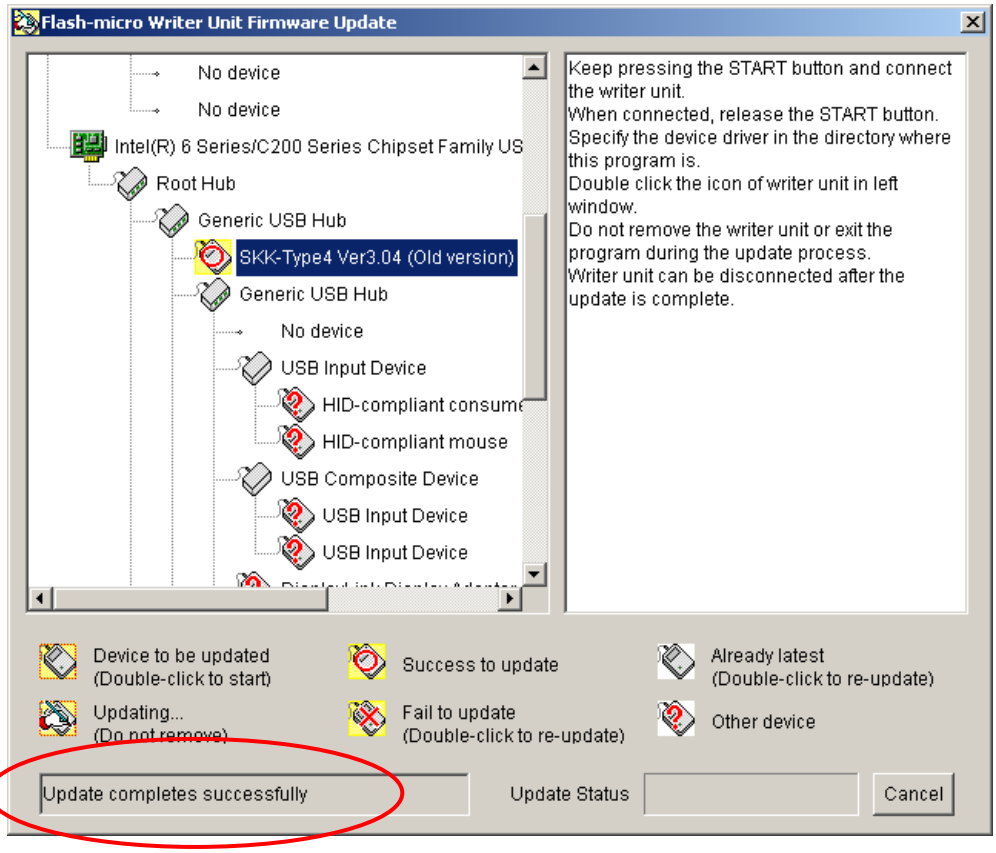

5) Disconnecting unit will return to the below window. (Same as 1.)
To update more than one unit, return to 2. and repeat the procedure.

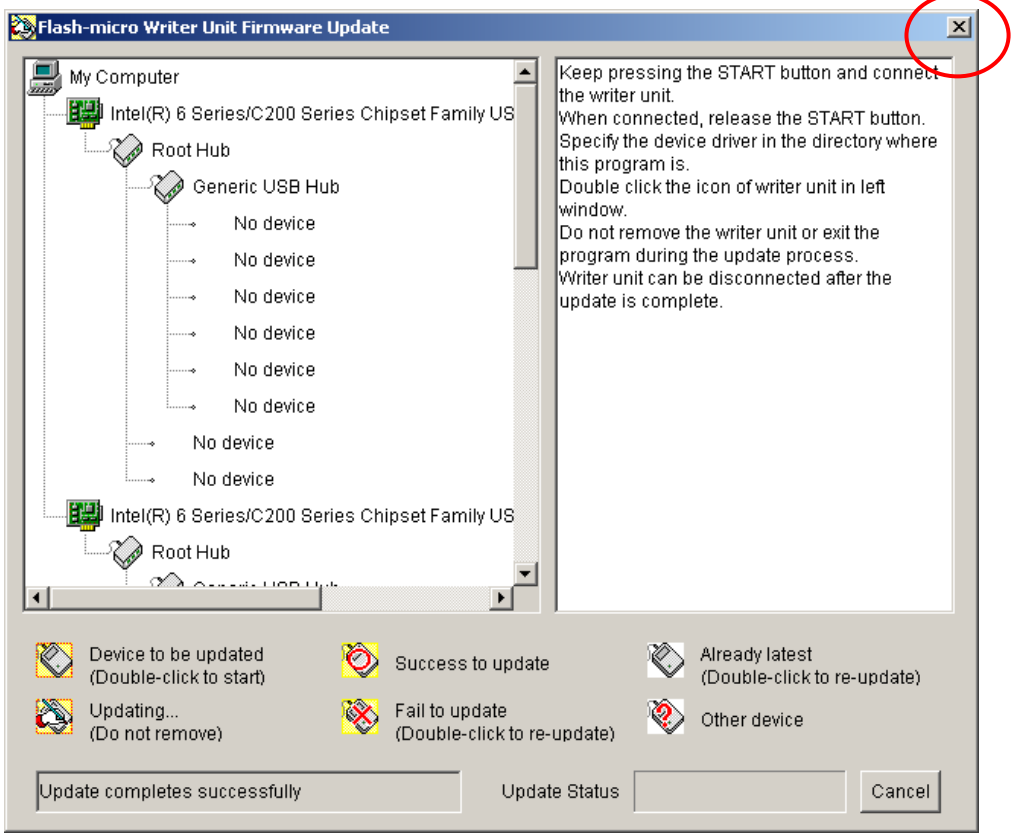

6) Finish the application by clicking [×].