



NCP81428+NCP81418 Test Procedure


1. Connect a 12V supply with a $> 1A$ current limit to VIN

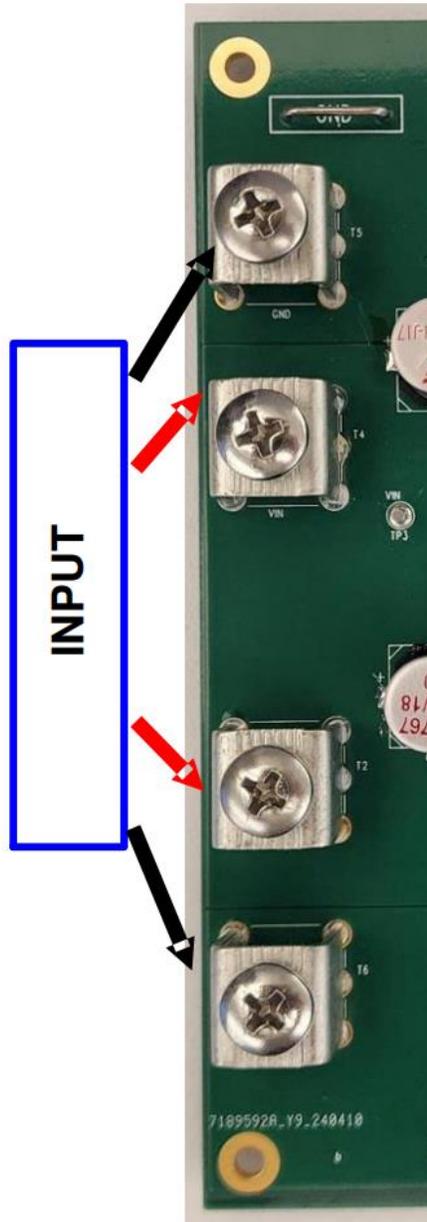

2. Connect a DMM to VOUT

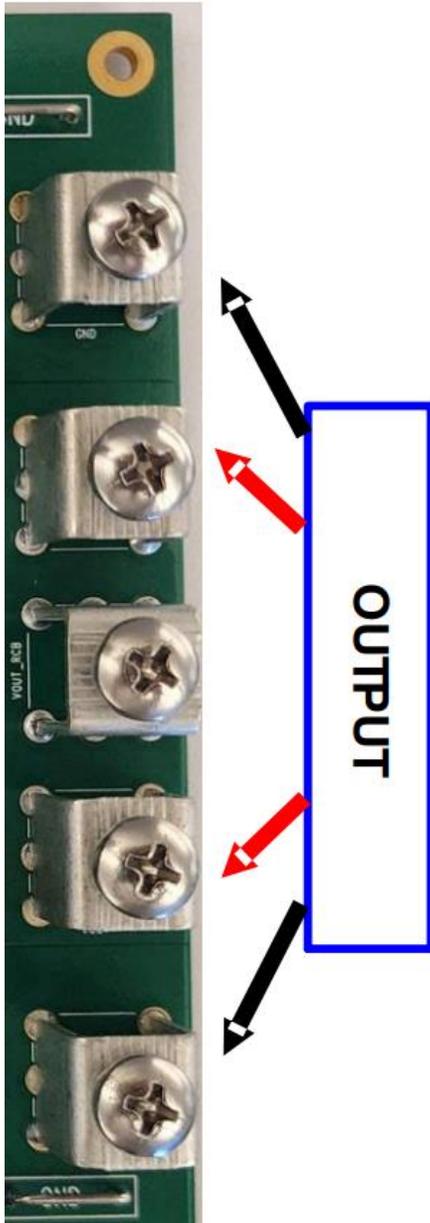

3. Ensure SW1 is in OFF position

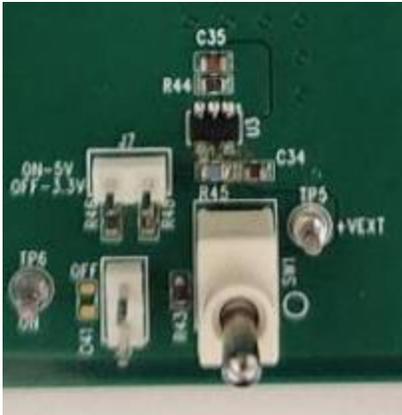

4. Enable VIN supply
5. Ensure that VOUT is less than 500 mV
6. Move SW1 to ON position
7. Ensure VOUT is above 11.5V, current on Vin supply should be around 20 mA (10 mA per device)
8. If all these conditions are met the board is working properly