**ON Semiconductor** 

Is Now

# Onsemi

To learn more about onsemi<sup>™</sup>, please visit our website at <u>www.onsemi.com</u>

onsemi and ONSEMI. and other names, marks, and brands are registered and/or common law trademarks of Semiconductor Components Industries, LLC dba "onsemi" or its affiliates and/or subsidiaries in the United States and/or other countries. onsemi owns the rights to a number of patents, trademarks, copyrights, trade secrets, and other intellectual property. A listing of onsemi product/patent coverage may be accessed at www.onsemi.com/site/pdf/Patent-Marking.pdf. onsemi reserves the right to make changes at any time to any products or information herein, without notice. The information herein is provided "as-is" and onsemi makes no warranty, representation or guarantee regarding the accuracy of the information, product factures, availability, functionality, or suitability of its products for any particular purpose, nor does onsemi assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation special, consequential or incidental damages. Buyer is responsible for its products and applications using onsemi products, including compliance with all laws, regulations and asfety requirements or standards, regardless of any support or applications information provided by onsemi. "Typical" parameters which may be provided in onsemi data sheets and/or by customer's technical experts. onsemi products and actal performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. onsemi products are not designed, intended, or authorized for use as a critical component in life support systems or any FDA Class 3 medical devices or medical devices with a same or similar classification in a foreign jurisdiction or any devices intended for implantation in the human body. Should Buyer purchase or use onsemi products for any such unintended or unauthorized application, Buyer shall indemnify and hold onsemi and its officers, employees, subsidiari



Is Now Part of



# **ON Semiconductor**®

To learn more about ON Semiconductor, please visit our website at <u>www.onsemi.com</u>

ON Semiconductor and the ON Semiconductor logo are trademarks of Semiconductor Components Industries, LLC dba ON Semiconductor or its subsidiaries in the United States and/or other countries. ON Semiconductor owns the rights to a number of patents, trademarks, copyrights, trade secrets, and other intellectual property. A listing of ON Semiconductor's product/patent coverage may be accessed at www.onsemi.com/site/pdf/Patent-Marking.pdf. ON Semiconductor reserves the right to make changes without further notice to any products herein. ON Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does ON Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation special, consequential or incidental damages. Buyer is responsible for its products and applications using ON Semiconductor dates sheds, regardless of any support or applications information provided by ON Semiconductor. "Typical" parameters which may be provided in ON Semiconductor dates sheds and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. ON Semiconductor does not convey any license under its patent rights of others. ON Semiconductor products are not designed, intended, or authorized for use on similar classification in a foreign jurisdiction or any devices intended for implantation in the human body. Should Buyer purchase or use ON Semiconductor and its officers, employees, subsidiaries, affliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out or i, directly or indirectly, any lay bed ON Semiconductor and its officers, employees, ween if such claim alleges that ON Semiconductor was negligent regarding the d



# **Application Note AN-9049** Assembly Guidelines for Fairchild's TinyBuck<sup>™</sup> Packaging

By Dennis Lang

# INTRODUCTION

The Fairchild TinyBuck<sup>TM</sup> package is based on Molded Leadless Packaging (MLP) technology. This technology has been increasingly used in packaging for power related products due to its low package height, excellent thermal performance with large thermal pads in the center of the package which solder directly to the printed wiring board (PWB) and allow modularity in package design, single and multi-die packages are within the capability of MLP technology.

The TinyBuck<sup>TM</sup> has three large die attach pads allowing direct soldering to the PWB for best thermal and electrical performance. The TinyBuck<sup>TM</sup> is a complete synchronous buck DC-DC solution, saving board space and component count by integrating several functions into one package.

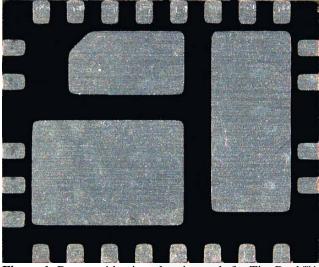


Figure 1: Bottom side view showing pads for TinyBuck<sup>TM</sup>

This application note focuses on the soldering and back end processing of the TinyBuck<sup>TM</sup>. Circuit design considerations will be addressed in another application note.

# **BOARD MOUNTING**

The solder joint and pad design are the most important factors in creating a reliable assembly. The pad must be designed to the proper dimensions to allow for tolerances in PWB fabrication and pick and place, and also to allow for proper solder fillet formation where applicable. MLP packages, when the pre-plated NiPdAu, lead-frame is sawn, show bare copper on the end of the exposed side leads. This is normal, and is addressed by IPC JEDEC J-STD-001C "Bottom Only Termination". However, it has been found that optimized PWB pad design and a robust solder process will typically yield solder fillets to the ends of the lead due to the cleaning action of the flux in the solder paste.

#### **PWB DESIGN CONSIDERATIONS**

Any land pad pattern must take into account the various tolerances involved in production of the PWB and the assembly operations required for soldering the DrMOS to the PWB. These factors have already been taken into consideration on the recommended footprint given on the datasheet. It is recommended the customer follow this footprint to assure best assembly and ultimately reliability performance, as well as from a thermal performance.








Figure 2: Solder wetted to lead-frame copper exposed by singulation on lead ends.

# **PAD FINISH**

The most frequently encountered pad finish for consumer electronics with tin lead solders was hot air solder leveled, HASL. With lead free, other finishes are preferred. Immersion silver, immersion nickel gold and organic surface protectant, OSP are the board finishes of choice. Each finish has useful properties, and each has its challenges. It is beyond the scope of this paper to debate each system's merits. Not any one finish will be right for all applications, but currently the most commonly seen in large scale consumer electronics is OSP. A high quality OSP like Enthone® Entek® Plus HT is recommended.

#### **PWB MATERIAL**

It is recommended that lead free FR-4 is used in PWB construction. Lower quality FR-4 can cause numerous problems with the reflow temperatures seen when using lead free solder. IPC-4101B "Specification for Base Materials for Rigid and Multilayer Printed Boards" contains further information on choosing the correct PWB material for the intended application.

# **USING VIAS WITH TinyBuck™**

Often the designer will wish to place vias inside of the center pads. While this is acceptable, the user should realize that vias often create voiding, and carefully study the process design with x-ray inspection of voiding to assure the design is yielding the expected performance. There are several types of via. Blind vias are not recommended due to the fact they often trap gases

generated during reflow and yield high percentages of voiding. Solder mask can also be placed over the top of the via to prevent solder from wicking down the via. It has been shown in previous studies that this will also create a higher incidence of voiding than an open through-hole or filled via. If through hole vias are used, a drill size of 0.3mm with 1 ounce copper plating yields good performance. With through-hole vias, solder wicking through the hole, or solder protrusion, must be considered. Opening the solder mask just enough to keep from plugging the via is recommended. By not creating a pad for solder to wet to on the reverse side of the via will help prevent protrusion. In high reliability applications, filled vias are the preferred due to lower incidences of voiding during reflow and eliminating the stress riser created by a void at the edges of the via barrel.

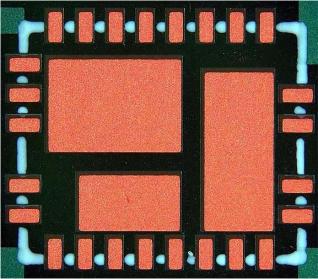


Figure 3: PWB pad showing OSP pad finish.

# **STENCIL DESIGN**

It is estimated that 60% of all assembly errors are due to paste printing anamolies. For a robust manufacturing process, it is therefore the most critical phase of assembly. Due to the importance of the stencil design, many stencil types were tried to determine the optimal stencil design for the recommended footprint pad, on a typical application board with Organic Surface Protectant (OSP) surface finish, thermal vias, on FR-4. It was found through statistical analysis the optimum solder paste coverage with a 4 mil thick stencil for the 3 center pads was 70%, with providing 50-80% acceptable results as well. (Dimensioned drawings of the 70% stencil apertures can be found in the appendix.) To allow gases to escape



during reflow it is recommended that the paste be deposited in a grid allowing "channels" for gases to vent. Various other stencil apertures can be used, such as circles, but were not studied here. The paste is printed on the outer pins with a slightly reduced ratio to the PWB pad. IPC-7525 "Stencil Design Guidelines" gives a formula for calculating the area ratio for paste release prediction:

Area Ratio = 
$$\frac{Area \ of \ Pad}{Area \ of \ Aperture \ Walls} = \frac{L^*W}{2^*(L^*W)^*T}$$

Where *L* is the length, *W* the width, and *T* the thickness of the stencil. When using this equation, an Area Ratio >0.66 should yield acceptable paste release. The recommended stencil apertures can be found in the appendix.

## SOLDER PASTE

The TinyBuck<sup>™</sup> is a RoHS compliant and lead free package. The lead finish is NiPdAu. Any standard lead free no clean solder paste commonly used in the industry should work with this package. The IPC Solder Products Value Council has recommended that the lead free alloy, 96.5 Sn/3.0Au/0.5Cu, commonly known as SAC 305, is "…the lead free solder paste alloy of choice for the electronics industry". Type 3 no-clean paste, SAC 305 alloy, was used for the construction of the boards studied to optimize the process.

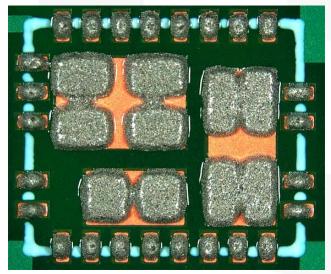


Figure 4: Printed Solder Paste.

#### www.fairchildsemi.com

### **REFLOW PROFILE**

The optimum reflow profile used for every product and oven is different. Even the same brand and model oven in a different facility may require a different profile. The proper ramp and soak rates are determined by the solder paste vendor for their products. Obtaining this information from the paste vendor is highly recommended. If one is using a KIC® profiler, downloading the latest paste library from KIC® will yield ramp rate and soak times at temperature for most commonly used solder pastes. The Fairchild TinyBuck<sup>TM</sup> is rated for 260°C peak temperature reflow. Attached in the appendix is a reflow profile example. This profile is provided for reference only; different PWBs, ovens and pastes will change this profile, perhaps dramatically.

## VOIDING

Voiding is a very controversial topic in the industry currently. The move to lead free solders, due to various governmental regulations, has created intense study in the area of solders, solder joints and reliability effects. There are varying viewpoints on the effect of vias and allowable quantity. There are several types of voids however; we will divide them into two classes, macro-voids, and microvoids.

Macro-voids could also be called process voids. Macro voids are the large sized voids commonly seen on x-ray during inspection. These voids are due to process design/control issues, or PWB design issues. All of the parameters discussed in this application note will effect macro-voiding. Most standards that currently exist, such as IPC-610D specifically address void criteria for BGA, and limit it to 25%. This standard is for macro-voiding. There is currently no IPC standard for voiding under large soldered areas as seen on the TinyBuck<sup>TM</sup>.

Fairchild has done several studies of the amount of voiding in various types of components with large thermal pads, and the effect on reliability. It was found that components with 25% voiding or less had acceptable reliability performance in package qualification temperature cycling. Fairchild gives the customer the guideline of 25% voiding for TinyBuck<sup>TM</sup> packages.

There are also several forms of micro-voiding, namely planar micro voids and Kirkendall voids. The mechanism of void creation is different for each; however both are practically undetectable by x-ray inspection. Both types



are also currently the subject of several in-depth studies; however, none have confirmed theories of creation.

Planar micro voids, or "champagne voids" occur at the PWB land to solder joint interface. There are several theories on the mechanism that creates planar micro voids, but there is not a confirmed root cause. Planar micro voids are a risk for reliability failures.

Kirkendall voids are created at the interface of two dissimilar metals at higher temperatures. In the case of solder attachments, at the pad to joint intermetallic layer. They are not due to the reflow process; Kirkendall voids are created by electro-migration in assemblies that spend large amounts of time above 100°C. There is currently conflicting evidence whether Kirkendall voids are a reliability risk or not.

#### REWORK

Due to the high temperatures associated with lead free reflow, it is recommended that this component not be reused if rework becomes necessary. The TinyBuck<sup>TM</sup> should be removed from the PWB with hot air. After removal, the TinyBuck<sup>TM</sup> should be discarded. The solder remnants should be removed from the pad with a solder vacuum or solder wick, the pads cleaned and new paste printed with a mini stencil. Localized hot air can then be applied to reflow the solder and make the joint. Due to the thermal performance of this component, and the typical high performance PWB it will be mounted on, quite a bit of heat energy will be necessary. Heating of the PWB may be helpful for the rework process.

# **BOARD LEVEL RELIABILITY**

As mentioned previously, per JDC-STD-001D a solder fillet is not required on the side of the lead for this package. But it has been found through modeling and temperature cycling that a solder fillet on the lead end can improve reliability. An improvement of 20% can be expected with this fillet. It was also found that if the fillet only wets halfway up the side of the lead, this reliability enhancement is still attained. Through process control these fillets are often created.

As part of the standard reliability testing this package was temperature cycled from -10 to 100C. There could be no failures in the sample set at 1000 cycles to pass the test.

#### WORKS CITED


- Aspandiar, Raiyo, "Voids in Solder Joints," SMTA Northwest Chapter Meeting, September 21, 2005, Intel Corporation
- [2] Bryant, Keith, "Investigating Voids," Circuits Assembly, June 2004
- [3] Comley, David, et al, "The QFN: Smaller, Faster and Less Expensive," Chip Scale Review.com, August/September 2002
- [4] Englemaier, Werner, "Voids in solder jointsreliability," Global SMT & Package, December 2005
- [5] IPC Solder Products Value Council, "Round Robin Testing and Analysis of Lead Free Solder Pastes with Alloys of Tin, Silver and Copper," 2005
- [6] IPC-A-610-D, "Acceptance of Electronic Assemblies," February 2005
- [7] IPC J-STD-001D, "Requirements for Soldered Electrical and Electronic Assemblies,"
- [8] IPC-SM-7525A, "Stencil Design Guidelines," May 2000
- [9] JEDEC, JESD22-B102D, "Solderability," VA, Sept. 2004
- [10] Syed, Ahmer, et al, "Board Level Assembly and Reliability Considerations for QFN Type Packages," Amkor Technology, Inc., Chandler, AZ

Applicable FSIDs: FAN2103MPX, FAN2103EMPX, FAN2106MPX, FAN2106EMPX, FAN2106MPX\_AA3E249, FAN2108MPX, FAN2108EMPX, FAN21SV06MPX, and FAN21SV06EMPX.




#### APPENDIX

**Dimensioned Stencil Apertures** 

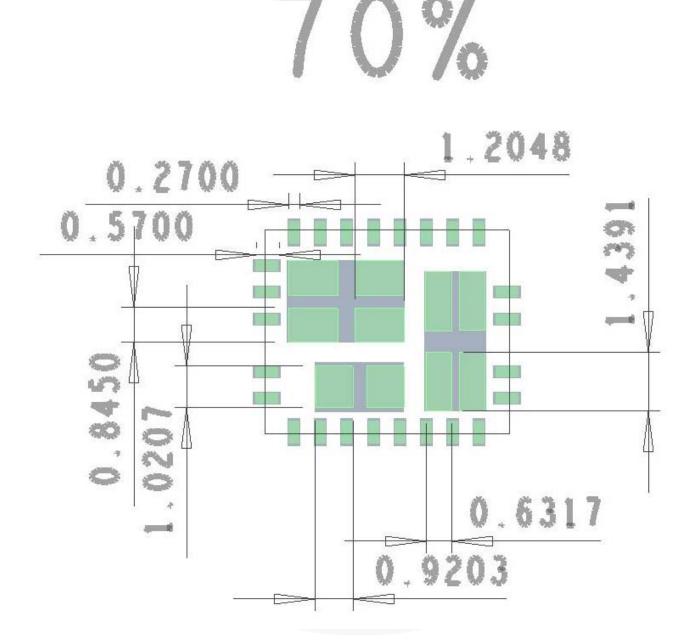



#### Reflow profile used for building demonstration boards.

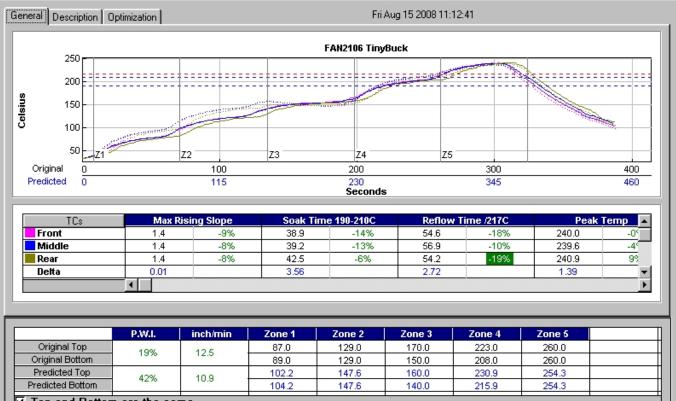

Top and Bottom are the same



ON Semiconductor and are trademarks of Semiconductor Components Industries, LLC dba ON Semiconductor or its subsidiaries in the United States and/or other countries. ON Semiconductor owns the rights to a number of patents, trademarks, copyrights, trade secrets, and other intellectual property. A listing of ON Semiconductor's product/patent coverage may be accessed at <u>www.onsemi.com/site/pdf/Patent-Marking.pdf</u>. ON Semiconductor reserves the right to make changes without further notice to any products herein. ON Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does ON Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation special, consequential or incidental damages. Buyer is responsible for its products and applications using ON Semiconductor products, including compliance with all laws, regulations and safety requirements or standards, regardless of any support or applications information provided by ON Semiconductor. "Typical" parameters which may be provided in ON Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. ON Semiconductor does not convey any license under its patent rights of others. ON Semiconductor products are not designed, intended, or authorized for use as a critical component in life support systems or any FDA Class 3 medical devices or medical devices with a same or similar classification in a foreign jurisdiction or any devices intended for implantation in the human body. Should Buyer purchase or use ON Semiconductor has against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death ass

#### PUBLICATION ORDERING INFORMATION

#### LITERATURE FULFILLMENT:

Literature Distribution Center for ON Semiconductor 19521 E. 32nd Pkwy, Aurora, Colorado 80011 USA Phone: 303-675-2175 or 800-344-3860 Toll Free USA/Canada Fax: 303-675-2176 or 800-344-3867 Toll Free USA/Canada Email: orderlit@onsemi.com N. American Technical Support: 800–282–9855 Toll Free USA/Canada Europe, Middle East and Africa Technical Support: Phone: 421 33 790 2910

Japan Customer Focus Center Phone: 81-3-5817-1050 ON Semiconductor Website: www.onsemi.com

Order Literature: http://www.onsemi.com/orderlit

For additional information, please contact your local Sales Representative

© Semiconductor Components Industries, LLC