

Test Procedure for the NCP57302DSADGEVB Evaluation Board

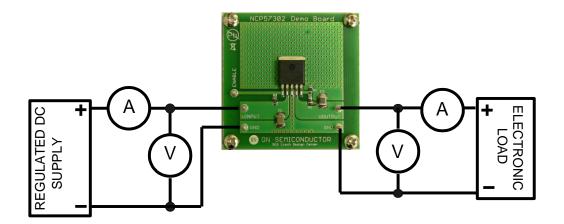


Figure 1: Test Setup

Test Procedure:

- 1. Connect the test setup as shown in Figure 1.
- 2. Apply an input voltage, Vin = 2.5 V dc
- 3. Apply lout = 10 mA load.
- 4. Check that Vout is 1.5 V
- 5. Increase lout load to 3.0 A
- 6. Check that Vout is 1.5 V
- 7. Power down the load
- 8. Power down Vin
- 9. End of test

11/8/2012 - 1 - www.onsemi.com