



Is Now Part of



ON Semiconductor®

To learn more about ON Semiconductor, please visit our website at
www.onsemi.com

ON Semiconductor and the ON Semiconductor logo are trademarks of Semiconductor Components Industries, LLC dba ON Semiconductor or its subsidiaries in the United States and/or other countries. ON Semiconductor owns the rights to a number of patents, trademarks, copyrights, trade secrets, and other intellectual property. A listing of ON Semiconductor's product/patent coverage may be accessed at www.onsemi.com/site/pdf/Patent-Marking.pdf. ON Semiconductor reserves the right to make changes without further notice to any products herein. ON Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does ON Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation special, consequential or incidental damages. Buyer is responsible for its products and applications using ON Semiconductor products, including compliance with all laws, regulations and safety requirements or standards, regardless of any support or applications information provided by ON Semiconductor. "Typical" parameters which may be provided in ON Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. ON Semiconductor does not convey any license under its patent rights nor the rights of others. ON Semiconductor products are not designed, intended, or authorized for use as a critical component in life support systems or any FDA Class 3 medical devices or medical devices with a same or similar classification in a foreign jurisdiction or any devices intended for implantation in the human body. Should Buyer purchase or use ON Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold ON Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that ON Semiconductor was negligent regarding the design or manufacture of the part. ON Semiconductor is an Equal Opportunity/Affirmative Action Employer. This literature is subject to all applicable copyright laws and is not for resale in any manner.

Application Note AN-9053

Assembly Guidelines for MicroFET 2x2 Packaging

By Dennis Lang

INTRODUCTION

The Fairchild® MicroFET 2x2 is a 2mm x 2mm package based on Molded Leadless Packaging (MLP) technology. This technology has been increasingly used in packaging for power related products due to its low package height, excellent thermal performance with large thermal pads in the center of the package which solder directly to the printed wiring board (PWB). Modularity in package design, single and multi-die packages, is within the capability of MLP technology. The MicroFET 2x2 has a large die attach pad allowing direct soldering to the PWB for best thermal and electrical performance. The MicroFET 2x2 is designed to be used with Fairchild® discrete MOSFET products. This application note focuses on the soldering and back end processing of the MicroFET 2x2.

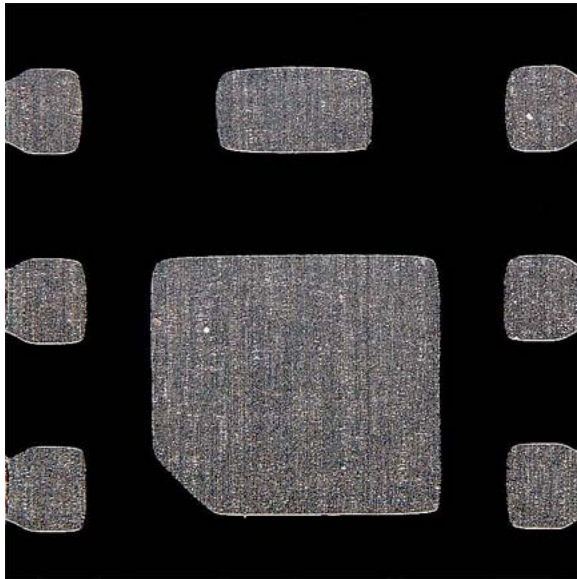


Figure 1: Bottom side view showing pads for MicroFET 2x2

BOARD MOUNTING

The solder joint and pad design are the most important factors in creating a reliable assembly. The pad dimensions must be

designed to allow for tolerances in PWB fabrication and pick and place, which are necessary for proper solder fillet formation. MLP packages, when the pre-plated lead-frame is sawn, show bare copper on the end of the exposed edge leads. This is normal, and is addressed by IPC JEDEC J-STD-001C “Bottom Only Termination”. In practice it has been found that optimized PWB pad design and a robust solder process often yields solder fillets to the ends of the lead due to the cleaning action of the flux in the solder paste.



Figure 2: Exposed copper on package edge, with solder wetting after reflow, from singulation process.

PWB DESIGN CONSIDERATIONS

Any land pad pattern must take into account the various PWB and board assembly tolerances for successful soldering of the MLP to the PWB. These factors have already been considered for the recommended footprint given on the datasheet. It is recommended the customer follow this recommended footprint to assure best assembly yield, thermal performance and overall system performance.

PAD FINISH

The MicroFET-6 is sold with a NiPdAu lead free lead finish. Immersion silver, immersion nickel gold and organic surface protectant, OSP are the pad finishes of choice for lead free processing. Each finish has useful properties, and each has its challenges. It is beyond the scope of this paper to debate each system's merits. No one finish will be right for all applications, but currently the most commonly seen in large scale consumer electronics, largely due to cost, is OSP. A high quality OSP, formulated for the rigors of lead free reflow, like Enthone® Entek® Plus HT is recommended.

PWB MATERIAL

It is recommended that lead free FR-4 is used in PWB construction. Lower quality FR-4 can cause numerous problems with the reflow temperatures seen when using lead free solder. IPC-4101B "Specification for Base Materials for Rigid and Multilayer Printed Boards" contains further information on choosing the correct PWB material for the intended application.

USING VIAS WITH MicroFET-6

Often the designer will wish to place vias inside of the thermal pads. While this is acceptable, the user should realize that vias often create voiding, and is advised to carefully characterize the PWB and process designs with x-ray inspection to ensure there is not a voiding problem. There are several types of vias that can be used in PWB design. Blind vias are not recommended due to the fact they often trap gases generated during reflow and yield high percentages of voiding. Solder mask can also be placed over the top of the via to prevent solder from wicking down the via. It has been shown in previous studies that this will create a higher incidence of voiding than an open through hole or filled via. If through hole vias are used, a drill size of 0.3mm with 1 ounce copper plating yields good performance. With through-hole vias, solder wicking through the hole, or solder protrusion, must be considered. In high

reliability applications, filled vias are the preferred due to lower incidences of voiding during reflow. The user can expect this approach to eliminate the stress riser created by a void at the edges of the via barrel.

STENCIL DESIGN

It is estimated that 60% of all assembly errors are due to paste printing. For a controlled, high yielding manufacturing process, it is therefore the most critical phase of assembly. Due to the importance of the stencil design, many stencil types have been characterized to determine the optimal stencil design for the recommended footprint pad, on a typical application board with Organic Surface Protectant (OSP) surface finish, thermal vias, on FR-4. Solder paste coverage for the thermal pads was printed ranging from 50-65% coverage. To allow gases to escape during reflow it is recommended that the paste be deposited in a grid allowing "channels" for gases to vent. It was found that with 40-60% solder coverage void performance was good, while maintaining good standoff height. The paste was printed from a 4 mils thick stainless steel stencil. Various different stencil apertures shapes can be used, but were not studied here. The paste is printed on the outer pins with a slightly reduced ratio to the PWB pad. Per IPC-7525 "Stencil Design Guidelines" gives a formula for calculating the area ratio for paste release prediction:

$$\frac{T \cdot W \cdot L}{W \cdot L} = \frac{\text{Walls Aperture of Area}}{\text{Pad of Area}} = \frac{\text{Ratio Area}}{(*) * (* 2)} = =$$

Where L is the length, W the width, and T the thickness of the stencil. When using this equation, an Area Ratio >0.66 should yield acceptable paste release. The recommended

stencil apertures can be found in the appendix.

Figure 3: Printed Solder Paste, 60% coverage.

SOLDER PASTE

The MicroFET-6 is a RoHS compliant and lead free package. The lead finish is NiPdAu. Any standard lead free no clean solder paste commonly used in the industry should work with this package. The IPC Solder Products Value Council has recommended that the lead free alloy, 96.5Sn/3.0Au/0.5Cu, commonly known as SAC 305, is "...the lead free solder paste alloy of choice for the electronics industry". Type 3 no-clean paste, SAC 305 alloy, was used for the construction of the boards studied to optimize the process.

REFLOW PROFILE

The optimum reflow profile used for every product and oven is different. Even the same brand and model oven in a different facility may require a different profile. The proper ramp and soak rates are determined by the solder paste vendor for their specific products. Obtaining this information from the paste vendor is highly recommended. If one is using a KIC® profiler, downloading the latest paste library from KIC® will yield ramp rate and soak times at temperature for most commonly used solder pastes. Using this data the software can optimize the zone set-points and speed. The Fairchild® MicroFET-6 is rated for 260°C peak temperature reflow. Below is a sample reflow profile used for building demonstration boards. Attached in the appendix is a reflow profile example. This profile is provided for reference only; different PWBs, ovens and pastes will change this profile, perhaps dramatically.

VOIDING

Voiding is a very controversial topic in the industry currently. The move to lead free solders has driven the need for intense study

in the area of solders, solder joints and reliability effects. There are varying viewpoints on the effect of vias and allowable quantity. There are several types of voids; for simplicity in this applications note we will classify them into two categories, macro voids, and micro voids. Macro voids could also be called process voids. Macro voids are the large sized voids commonly seen on x-ray during inspection. These voids are due to process design and process control issues, or PWB design issues. All of the parameters discussed in this application note will effect macrovoiding. Most standards that currently exist, such as IPC-610D specifically address void criteria for BGA, and limit it to 25%. This standard is for macro voiding. There is currently no industry standard for macro voiding in MLP solder joints. Fairchild® has completed several reliability studies characterizing voiding in various types of components with large thermal pads, and the effect on reliability. It was found that components with $\leq 25\%$ voiding exhibit acceptable reliability performance in package qualification temperature cycling. Fairchild® recommends the guideline of 25% maximum voiding for MLP type packages.

Figure 4: X-ray image showing voiding caused by normal process variation during reflow.

There are also several forms of micro-voiding, namely planar micro voids and Kirkendall voids. The mechanism of void creation is different for each; however both are practically undetectable by x-ray inspection. Both types are also currently the subject of several in-depth studies; however, none have confirmed theories of creation. Planar micro voids, or "champagne voids" occur at the PWB land to solder joint interface. There are several theories on the mechanism that creates planar micro voids, but there is no industry consensus on the causal mechanism for this

type of voiding. Planar micro voids are a risk for reliability failures. Kirkendall voids are created at the interface of two dissimilar metals at higher temperatures. In the case of solder attachments, at the pad to joint intermetallic layer. They are not due to the reflow process; Kirkendall voids are created by electromigration in assemblies that spend large amounts of time above 100°C. There is currently conflicting evidence whether Kirkendall voids are a reliability risk or not.

REWORK

Due to the high temperatures associated with lead free reflow, it is recommended that this component not be reused if rework becomes necessary. The MicroFET-6 should be removed from the PWB with hot air. After removal, the MicroFET-6 should be discarded. The solder remnants should be removed from the pad with a solder vacuum or solder wick, the pads cleaned and new paste printed with a mini stencil. Localized hot air can then be applied to reflow the solder and make the joint. Due to the thermal performance of this component, and the typical high performance PWB it will be mounted on, quite a bit of heat energy will be necessary. Heating of the PWB may be helpful for the rework process.

BOARD LEVEL RELIABILITY

As mentioned previously, per JDC-STD-001D a solder fillet is not required on the side of the lead for this package. But it has been found through modeling and temperature cycling that a solder fillet on the lead end can improve reliability. An improvement of 20% can be expected with this fillet. It has also been found that the 20% reliability enhancement is attained even when the fillet only wets halfway up the side of the lead. The customer can expect to create reliability enhancing solder fillets through proper process design and control. As part of the standard reliability testing this package was temperature cycled from -10 to 100C. There

could be no failures in the sample set at 1000 cycles to pass the test.

WORKS CITED

- [1] Aspandiar, Raiyo, "Voids in Solder Joints," SMTA Northwest Chapter Meeting, September 21, 2005, Intel Corporation
- [2] Bryant, Keith, "Investigating Voids," Circuits Assembly, June 2004
- [3] Comley, David, et al, "The QFN: Smaller, Faster and Less Expensive," Chip Scale Review.com, August/September 2002
- [4] Englemaier, Werner, "Voids in solder joints-reliability," Global SMT & Package, December 2005
- [5] IPC Solder Products Value Council, "Round Robin Testing and Analysis of Lead Free Solder Pastes with Alloys of Tin, Silver and Copper," 2005
- [6] IPC-A-610-D, "Acceptance of Electronic Assemblies," February 2005
- [7] IPC J-STD-001D, "Requirements for Soldered Electrical and Electronic Assemblies,"
- [8] IPC-SM-7525A, "Stencil Design Guidelines," May 2000
- [9] JEDEC, JESD22-B102D, "Solderability," VA, Sept. 2004
- [10] Syed, Ahmer, et al, "Board Level Assembly and Reliability Considerations for QFN Type Packages," Amkor Technology, Inc., Chandler, AZ

Applicable FSIDs: FDFMA2N028Z, FDFMA2P029Z, FDFMA2P853, FDFMA2P857, FDFMA3N109, FDMA1023PZ, FDMA1024NZ, FDMA1025P, FDMA1027P, FDMA1028NZ, FDMA1028NZ_F021, FDMA1029PZ, FDMA1032CZ, FDMA2002NZ, FDMA291P, FDMA3023PZ, FDMA410NZ, FDMA420NZ, FDMA430NZ, FDMA510PZ, FDMA520PZ, FDMA530PZ, FDMA530PZ_F021, and FJMA790.

ON Semiconductor and  are trademarks of Semiconductor Components Industries, LLC dba ON Semiconductor or its subsidiaries in the United States and/or other countries. ON Semiconductor owns the rights to a number of patents, trademarks, copyrights, trade secrets, and other intellectual property. A listing of ON Semiconductor's product/patent coverage may be accessed at www.onsemi.com/site/pdf/Patent-Marking.pdf. ON Semiconductor reserves the right to make changes without further notice to any products herein. ON Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does ON Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation special, consequential or incidental damages. Buyer is responsible for its products and applications using ON Semiconductor products, including compliance with all laws, regulations and safety requirements or standards, regardless of any support or applications information provided by ON Semiconductor. "Typical" parameters which may be provided in ON Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. ON Semiconductor does not convey any license under its patent rights nor the rights of others. ON Semiconductor products are not designed, intended, or authorized for use as a critical component in life support systems or any FDA Class 3 medical devices or medical devices with a same or similar classification in a foreign jurisdiction or any devices intended for implantation in the human body. Should Buyer purchase or use ON Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold ON Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that ON Semiconductor was negligent regarding the design or manufacture of the part. ON Semiconductor is an Equal Opportunity/Affirmative Action Employer. This literature is subject to all applicable copyright laws and is not for resale in any manner.

PUBLICATION ORDERING INFORMATION

LITERATURE FULFILLMENT:

Literature Distribution Center for ON Semiconductor
19521 E. 32nd Pkwy, Aurora, Colorado 80011 USA
Phone: 303-675-2175 or 800-344-3860 Toll Free USA/Canada
Fax: 303-675-2176 or 800-344-3867 Toll Free USA/Canada
Email: orderlit@onsemi.com

N. American Technical Support: 800-282-9855 Toll Free
USA/Canada
Europe, Middle East and Africa Technical Support:
Phone: 421 33 790 2910
Japan Customer Focus Center
Phone: 81-3-5817-1050

ON Semiconductor Website: www.onsemi.com
Order Literature: <http://www.onsemi.com/orderlit>
For additional information, please contact your local
Sales Representative